

What to do if...
What to do if...



A tire punctures

P. 492 If you have a flat tire



The engine does not start

P. 501 If the engine will not start
P. 86 Engine immobilizer system
P. 505 If the vehicle battery is discharged



The shift lever cannot be moved out of P

P. 503 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 512 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 504 If you lose your keys



The battery runs out

P. 509 If the vehicle battery is discharged



The doors cannot be locked

P. 43 Doors



The horn begins to sound

P. 88 Alarm



The vehicle is stuck in mud or sand

P. 515 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 471

If a warning light turns on or a warning buzzer sounds...



CLYPIAB397

■ Warning lights

BRAKE

Brake system warning light

or



P. 471



Malfunction indicator lamp

or



P. 472

ABS

ABS warning light

or



P. 472



Driver's seat belt reminder light

P. 473



Front passenger's seat belt reminder light

P. 473



Low fuel level warning light

P. 473



Master warning light

P. 473



SRS warning light

P. 472



Electric power steering warning light

P. 472



Open door warning light

P. 473

PCS

Pre-collision system warning light

P. 472



Charging system warning light

P. 472



Tire pressure warning light

P. 473

KEY IS NOT DETECTED

A warning message is displayed

P. 480

If a warning message is displayed